



CLUB CAR DS CLAYS BASKET INSTALLATION INSTRUCTIONS

04-010


INCLUDED:
MADJAX CLAYS BASKET
BRACKETS
HARDWARE PACK



1
Remove bolts from front struts.
Retain all factory hardware.
You will need it later.



2
Using retained factory hardware,
attach brackets to front struts.
Tighten bolts.

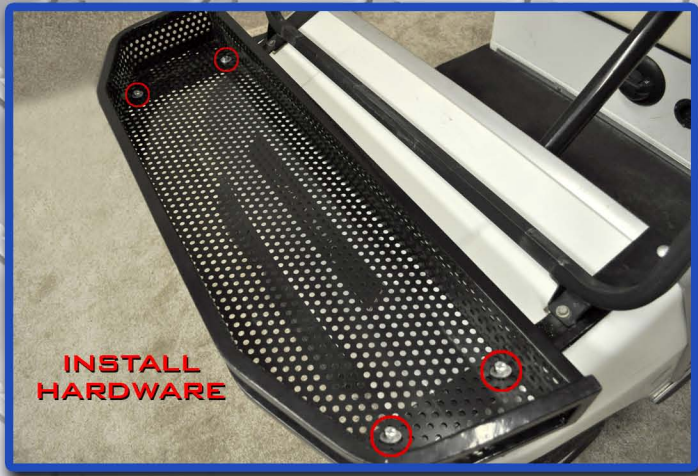

CLUB CAR DS CLAYS BASKET HARDWARE PACKS

HARDWARE PACK 1

- (2) 8MM X 30MM SHOULDER HEX BOLTS
- (4) 8MM X 25MM SHOULDER HEX BOLTS
- (12) 8MM X 20MM X 2MM WASHERS
- (6) 8MM ANTI-SLIP NUTS

